

- - For the maximum number of units, see the table for maximum number of valve units by wiring specification, on p. 51.

 Valve mounting location is from the left, with the solenoid on top, and the 4(A), 2(B) ports side in front.

 When the valve specification is T1 or T2, the manual override lever is placed only on the A side.

 Always enter -A1 and -PN.


 - 5. Cannot be mounted on the external pilot manifold.
 6. Cannot be mounted on the internal pilot manifold.
- 7. Caution should be exercised that the block-off piate wining is always double wining (allocated 2 control pins at 1 stn.), regardless of the wiring connection specification. For single wiring, see p. 51.

 8. Not available in the vacuum valves.

 9. Not available in external pilot type and vacuum valves.

 10. Not available with the individual exhaust spacer and vacuum valve.

- 11. Not available in low-current type.
 12. Not available in low-current type and tandem 3-port valves. In addition, only available when the wiring specification is a D-sub connector.
 13. Can be selected only when the manifold type is A.
 14. Can be selected only when the manifold type is AH.

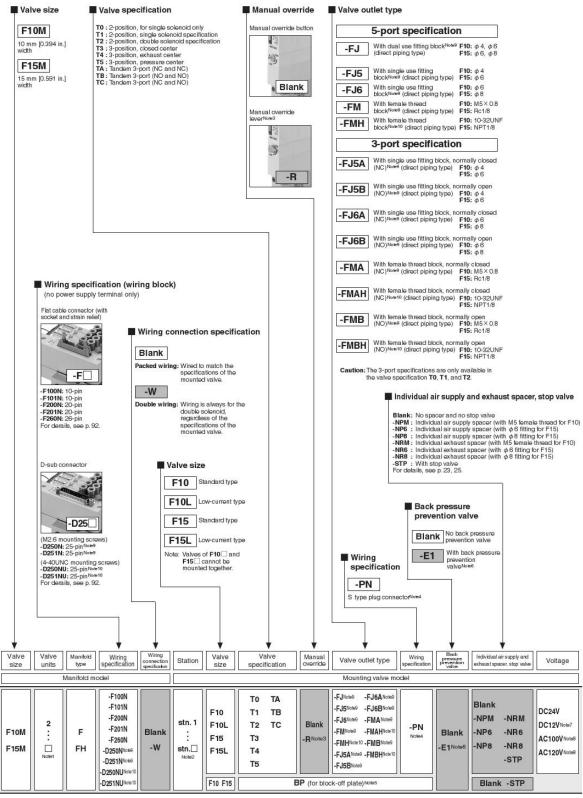

- Notes: 1. For the maximum number of units, see the table for maximum number of valve units by wiring specification, on p. 53.

 2. Valve mounting location is from the left, with the solenoid on top, and the 4(A), 2(B) ports side in front.

 3. When the valve specification is T1 or T2, the manual override lever is placed only on the A side.

 - Always enter -PN.
 - Caution should be exercised that the block-off plate wiring is always double wiring (allocated 2 control pins at 1 stn.), regardless of the wiring connection specification. For single wiring, see p. 53.
- 6. Not available with the individual exhaust spacer
- 6. Not available with the individual exhaust spacer.
 7. Not available in low-current type.
 8. Not available in low-current type and tandem 3-port valves. In addition, only available when the wiring specification is a D-sub connector.
 9. Can be selected only when the manifold type is F.
 10. Can be selected only when the manifold type is FH.

Remark: The external pilot type valve cannot be mounted on the F type manifold.