
Seven Features of the Koganei Vacuum Valve

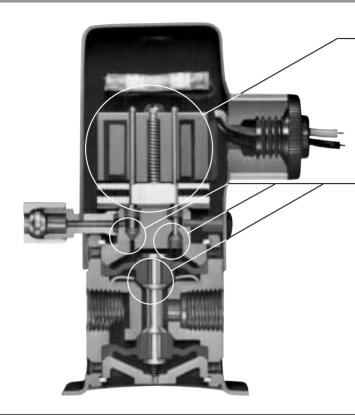

Koganei Original Solenoid Construction

- No burning damage to solenoid
 No need to stock solenoids as spare parts.
- ② Starting and energizing current values are extremely small.

Allows for more compact size peripheral electrical equipment.


Poppet and Diaphragm Construction

- 3 No sliding parts
 - No valve sticking, for reliable operations.
- Extremely few cases of vacuum leakage
 Good vacuum response enables excellent pick-up by a vacuum
 pad and compact vacuum pump to install.
- ⑤ Dust-resistant Can be used by installing just an ordinary air filter, even in dusty locations.
- (6) Can be used without lubrication.
 Optimum valve for equipment incapable of using oil.
- ⑦ Compact and lightweight, with any mounting direction acceptable


Can be easily mounted to control panel, and allows for more compact equipment.

Application Examples


Opening bags

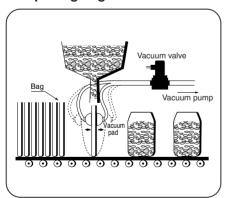


Quick charging of liquids

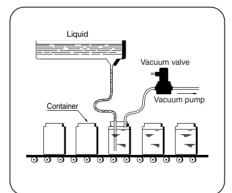


Paper feeding for printers

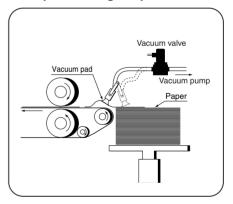


Vacuum forming machines

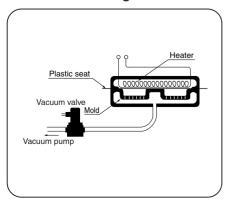



■ Discriminating product facing

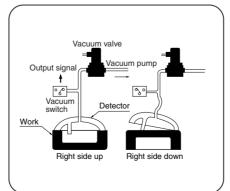

■ Labeling on cardboard boxes

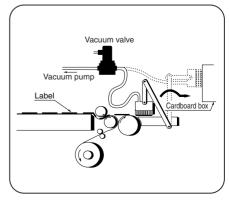


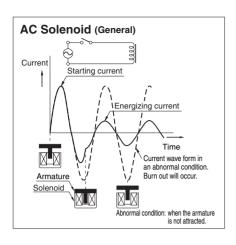


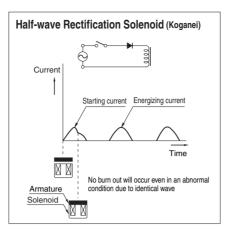

Koganei's ingenious self-developed solenoid

A silicon diode is installed on the end of the solenoid for half-wave rectification of the alternating current. The solenoid, therefore, possesses midway characteristics between the AC solenoid and DC solenoid. In addition, since the armature is designed to move as short a distance as possible, the starting current (inrush current) and energizing current are virtually identical and low current. As a result, the solenoid is not damaged even in abnormal conditions in which the armature fails to move, and the capacity of related electrical equipment can remain low.

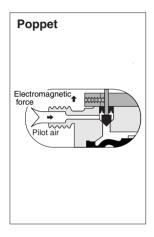


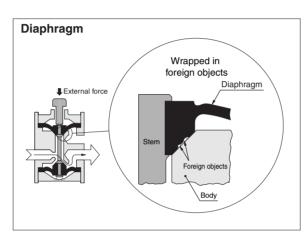


Poppet and diaphragm construction

The synthetic rubber poppet and diaphragm are built into the stem and move as one-piece. The poppet and diaphragm do not have any sliding surfaces, therefore no sticking occurs even without lubrication. In addition, the units have the elasticity of synthetic rubber to wrap in small foreign objects and keep vacuum leaks to an extremely low level.


Vacuum lifting

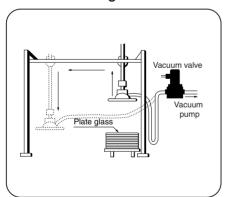


Reducing sheet transfer time (both vacuum and positive pressure)

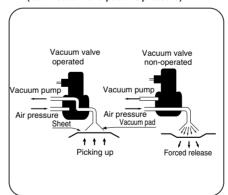


Tape speed controlling

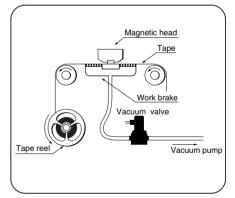


■ Holding subject (sheets)

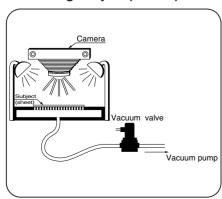

Inducing gas into analyzers

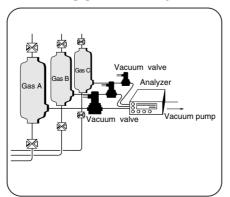

Airtightness inspecting

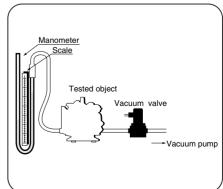

<Product Range>

Products	Shape	Operation	Port size Rc	Port	Function	Effective area (Cv) mm²	Model	Page			
					2, 3		0.5	V062E1	-		
			Direct acting		3		2.5 (0.12)	SV062E1 (Both vacuum and pressure type)	961		
Solenoid vacuum valve			Direct acting	1/4	2		5.5 (0.27)	(Both vacuum and pressure type) V126E1	-		
			Indirect ecting				15	VA250AE1			
		Single solenoid	Indirect acting Sternal	3/8		●NC ●NO	(0.76)	VA2503AE1	964		
		Colonola	air pilot	1/2	3		55 (2.7)	VA500AE1	967		
			Indirect acting	1/4			15	VV250AE1	964		
			External vacuum pilot	3/8			(0.76)	VV2503AE1	904		
			C pilot J	1/2			55 (2.7)	VV500AE1	967		
		Double solenoid	Indirect acting	1/4		●NC/	15	VA250AE2	964		
		(Continuously energizing type)	External air pilot	3/8	3	NO NO	(0.76)	VA2503AE2			
			(all pilot)	1/2			55 (2.7)	VA500AE2	967		
alve				1/8	3		5.5 (0.27)	V125P	_		
Manual vacuum valve and foot vacuum valve		Push button	Spring return	1/4	2, 3	2, 3 •NC	15	V250P	-		
				3/8			(0.76)	V2503P	_		
		Lever	With holding mechanism	1/8			5.5	V125HO	_		
					3	●NC/	(0.27)	V125V	970		
			Haldina to to con-	1/4	-	NO		V250V	_		
			Holding type	3/8	- 5		15	V2503V	4		
				1/4		_	(0.76)	V250-4H	-		
		F	D. I.I.	3/8		•		V2503-4H	-		
		Foot	Pedal type	1/4	2, 3	●NC	F F (0 07)	V250F	+		
valve		Ball-cam				• NO	5.5 (0.27)	V125B	-		
cnnm					3	3 ●NC	3	INC	INC	UNC	INC
ted va				3/8			15 (0.76)	V2503B V250C	-		
lechanical operated vacuum valve			Nylon roller	3/8	2, 3			V250C V2503C	973		
nical		Roller-cam	Steel	0,0		●NC		V125MC	+		
Mecha			One way	1/8	3		5.5 (0.27)	V125MOC	+		
_			steel roller	1/8			5.5 (0.27)	VA125A	+		
		Air nile		1/4			15	VA250A	-		
O)		Air pilo (single)	l	3/8			(0.76)	VA2503A	-		
alve	ales.			1/2	3	●NC	55 (2.7)	VA500A	976		
ر د				1/4			15	VV250A	1		
l nn		Vacuum p (single)	oilot	3/8	-		(0.76)	VV2503A	1		
Piloted vacuum valve	3	(Sirigle)		1/2	1		55 (2.7)	VV500A	1		
þ				1/4			15	250A2	\top		
lote				3/8	1		(0.76)	2503A2	1		
Ē		Double air	pilot	1/2	2, 3	NC/ NO	55 (2.7)	500A2	979		
					1	.,,	140(7)	750A2	1		
	•			1			280 (14)	1000A2	1		

- Warnings 1. When mounting a valve inside a control panel or when an operation requires long energizing periods, provide heat radiation measures to ensure that the ambient temperature always remains within the temperature range specifications. For long term continuous energizing, consult us.
 - 2. Always check the Catalog, etc., when carrying out wiring and piping of products to ensure that the connections are correctly done. Wrong wiring or piping could result in abnormal operation to the actuator, etc.
 - 3. The solenoid valve's silicon diode could be damaged by surge voltage when a large induction load is used on the same power supply. Either change to a separate power supply, or mount a surge absorber to protect the unit. Solenoids with surge suppression are also available. Consult us.



For locations subject to water or to large amounts of dust, use a cover, etc., to protect the valves. Also, install a muffler, etc., to the R port to prevent dust from entering. Intrusion of water or dust could result in short-term functional shutdowns, sudden drops in performance, or a reduced operating life.



- Attention 1. Use clean air that does not contain degraded compressor oil, etc., and install a filter, etc., close to solenoid valves to remove dust or collected liquid.
 - 2. Ensure that the piping port on the supply side is at the same area or larger than the solenoid valve's effective area.
 - 3. When using an indirect acting valve, use a stop valve between it and the pressure source. When the stop valve is opened before the pressure reaches the minimum operating pressure, the indirect acting valve could fall into a neutral position. (All solenoid valves in the 250 series and up are indirect acting valves.)
 - 4. When connecting 2 or more AC type solenoid valves to the same power supply, connect leads with the same lead wire color.
 - 5. Since a diode is connected to the AC type solenoid valve, the solenoid may sometimes not turn on with the solid state-type relay (SSR) with zero-cross function. For this reason, pay attention before use to the ratings and precautions for use of the solid state-type relay.

Rated voltage V

Voltage Types and Current

Pot	ed voltage V	Current A ^{Note}								
Паі	eu voitage v	50Hz	60Hz							
	230*	0.063	0.055							
	220*	0.058	0.072							
AC	200	0.070	0.065							
	115**	0.13	0.11							
AC	110**	0.12	0.16							
	100	0.14	0.13							
	48**	0.41	0.37							
	24**	0.93	0.83							

	ra romago r	Garrent
	200*	0.04
	110**	0.08
	100**	0.09
DC	48*	0.19
	24	0.40
	12*	0.75
	6*	1.50


Current A

For * items, consult us for the delivery.

Note: The starting current and energizing current values are virtually identical, and fall within these values

Wiring Instructions of Double Solenoid (E2)Type

This valve has 2 solenoids built into the top and mid section, and the lead wires are color-coded with vinyl tape. Energizing the red tape side (the upper side, solenoid S2) opens the valve, and energizing the gray tape side (the lower side, solenoid S1) closes the valve. This solenoid is a continuous energizing holding type.

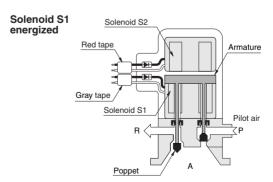

Mechanical Operated Vacuum Valves



Specifications

Item Basic mode	V125B	V250B	V2503B	V125MC	V125MOC	V250C	V2503C					
Media	11202	12002	120002	Vacuum	7 12011100	12000						
Q		Ball-cam			Roller	-cam						
Operation type				Steel roller	One way steel roller	V250C V2503C	n roller					
Number of ports	3 ports (Can	not be used as 2-p	ort and normally ope	en (NO) in terms of	construction)	2, 3 ports						
Valve function		Normally closed (NC)										
Effective area (Cv) mm²	5.5 (0.27)	15 (0.76〕	5.5〔	(0.27)	15 (0.76)						
Port size Rc	1/8	1/4	3/8	1	/8	1/4	3/8					
Lubrication				Not required								
Operating pressure range kPa{mmHg} [in.Hg]			0~-10	0 {0~-750} [0~-	-29.53]							
Minimum operating force kgf [lbf.]	2 [4.4]	3 [6.6]		1.5 [3	3.3]						
Operating temperature range °C [°F]				5~60 [41~140]								
Mounting direction			Any									
Mass kg [lb.]	0.1 [0.22]	0.2 [0.44]	0.25 [0.55]	0.15	[0.33]	0.3 [0.66]	0.35 [0.77]					

Order Codes

		Basic model	Option ————————————————————————————————————	– Mounting method – With lock nuts for panel mounting
	3-port	V125B		-22
Ball-cam	3-port	V250B		
	3-port	V2503B		
	3-port	V125MC		-22
Roller-cam	3-port	V125MOC		-22
rioler-cam	2-, 3-port	V250C	-2	
	2-, 3-port	V2503C	-2	

●Blank: Base mounting type

Blank: 3-port

Normal condition


Operating condition R(atmospheric pressure) P(vacuum)


V125B V250B V2503B	V250C-2 V2503C-2	V125MC V250C V2503C	V125MOC
A P R	A P	A P R	A P R
3-port NC	2-port NC	3-port NC	3-port NC


Dimensions (mm)

V125B


V250C

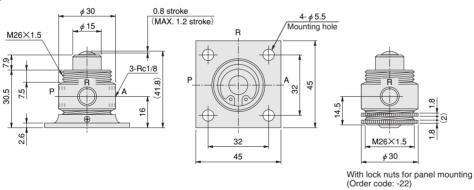

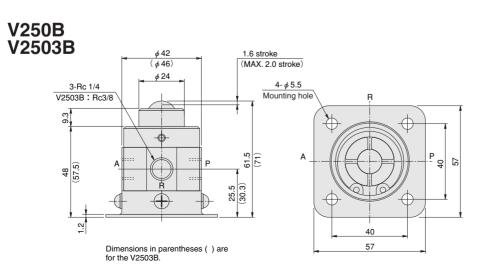


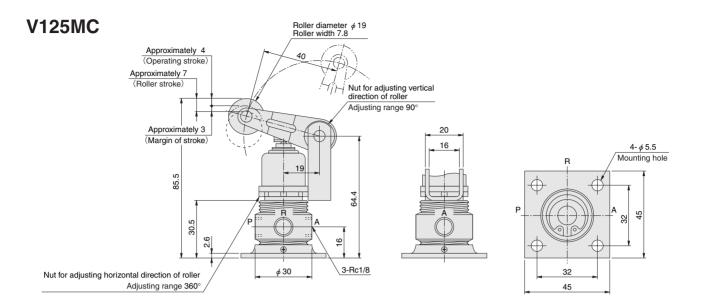

V250C V2503C

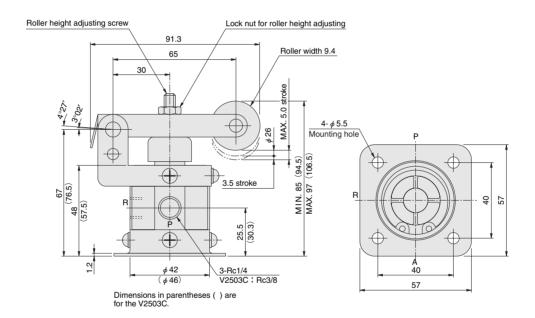

V125MOC

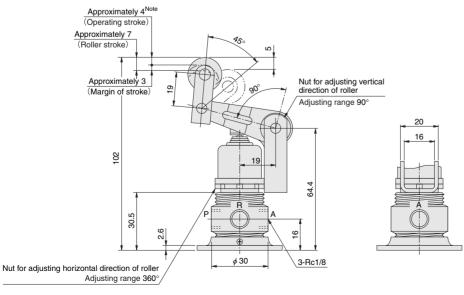


Note: Pushing the button more than necessary can shorten the operating life.

■Vacuum Valve Selection Table (Exhaust and Air Supply Response Times)


	50cc [3.05in ³] chamber 200cc [12.2in ³] chamber 1 ℓ [61in ³] chamber							3 ℓ [183in.³] chamber				5.5 ℓ [336in.³] chamber				10.5 ℓ [641in3] chamber								
Vacuum	Exhaust ^{Note} Air supply Exhaust Air supply		Exh	Exhaust Air supply		Exhaust Air supply		Exhaust		Air supply		Exhaust		Air supply										
kPa [in.Hg]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]
Model	-81.3 [-24.01]	-42.6 [-12.58]	0	0 0	-81.3 [-24.01]	-42.6 [-12.58]	0 0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0 0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0	-81.3 [-24.01]	-42.6 [-12.58]	0	0 0
V062E1	0.2	0.08	0.18	0.1	0.7	0.35	0.5	0.38	3.0	1.5	2.5	1.8	9.0	3.2	6.0	4.0	20.0	8.0	14.0	10.0				
V126E1	0.12	0.05	_	_	0.4	0.2	_	_	1.8	0.9	_	_	5.0	1.7	_	_	11.0	3.5	_	_				
VA125A	0.1	0.06	0.13	0.12	0.35	0.15	0.3	0.2	1.6	0.7	1.3	8.0	3.8	1.4	2.6	1.8	9.0	3.4	6.0	4.0	_			
VA250AE1	0.05	0.03	0.09	0.04	0.1	0.05	0.08	0.07	0.5	0.23	0.16	0.18	1.1	0.4	0.7	1.0	2.4	1.0	1.7	1.0				
VA500AE1	0.04	0.03	0.14	0.14	0.07	0.05	0.14	0.14	0.25	0.1	0.15	0.18	0.5	0.2	0.4	0.3	1.1	0.4	0.6	0.5	2.0	8.0	1.0	0.8
1000A2	_												0.26	0.14	0.26	0.2	0.4	0.2	0.4	0.3				

Note: The exhaust vacuum in the chamber is a 80% rating value of the vacuum inside of the primary tank.

The above table shows the time it takes from the point in time where the vacuum valve is switched ON to reach the specified vacuum inside of the chamber, and the time from switching the vacuum valve OFF to supply air into the chamber.

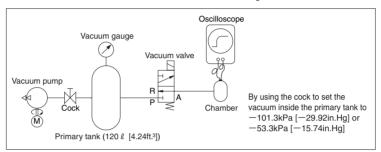

Standard Vacuum Circuit

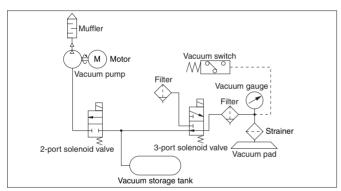

Inspection Standard for Vacuum Leaks (Koganei standards)

Inspection procedure

Open valve A, and set the vacuum in the tank to -100kPa {-750mmHg} [-29.53in.Hg]. Afterward, close valve A, let set for 10 minutes, and then check the vacuum inside of the tank both during OFF and ON


Inspection standard

Let set for 10 minutes, then check to see that the vacuum leaks inside the tank meets the standard of 1.3kPa {10mmHq} [0.38in.Hq] or less.

For details, consult us.

Remark


In fact, most Koganei vacuum valves can hold initial vacuum even after being left set for 10 minutes.

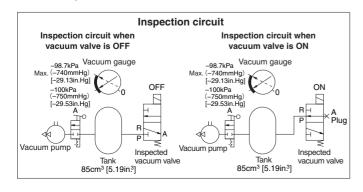

■Calculation of Picking-up Force, and Graph


(Theoretical values)

When using a vacuum pad to hold picking-up an object, the pickingup force is shown by the following formula.



760 W': Picking-up force (kgf) W": Picking-up force [lbf.] P': Vacuum (mmHg) A': Pad area (cm²)


P": Vacuum [in.Hg] A": Pad area [in.2]

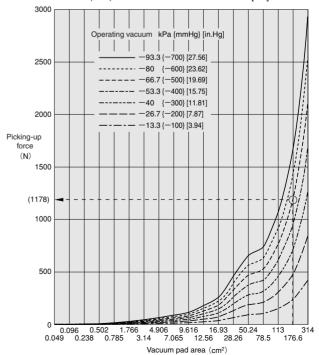


How to read the graph

When the vacuum is -66.7kPa [-19.7in.Hg], and the vacuum pad area is 176.6cm² [27.37in.²], the picking-up force is 1178N [265lbf.]. 982

■ How to Use Both Vacuum and Pressure Type (SV062E1)

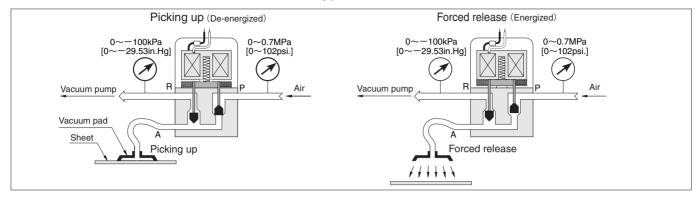


■ Application of External Air Pilot Type (VA250AE1/ VA2503AE1/ VA500AE1)

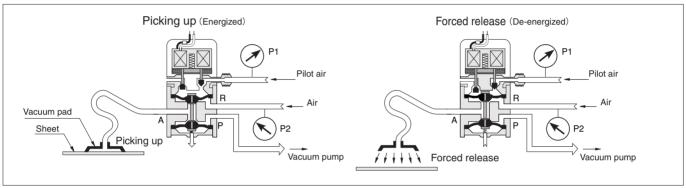

Note: Use as P₁ > 2P₂.

■ Application of External Double Air Pilot Type (250A2 / 500A2, etc.)

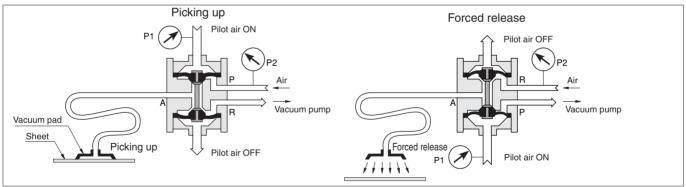

Note: Use as P₁ > 2P₂.

■ Pressure Unit Comparison Table

